


Exploitation du fichier ULTRAMIX.CSV

- Le fichier ULTRAMIX.CSV est automatiquement et quotidiennement mis à jour à minuit. Il peut néanmoins être mis à jour manuellement en utilisant la fonction Export SD pour extraire les données du jour.

Ouverture du fichier .csv sous excel

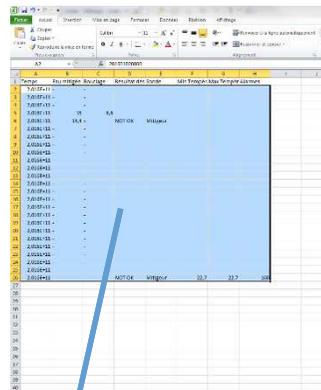


Sélection et copie de la zone de donnée

Ouverture du fichier modèle .xlsx ayant l'extraction des courbes de température (modèle transmis ULTRAMIX CSV.xlsx)

Recopie de la zone de donnée du fichier .csv

	A2	B	C	D	E	F	G	H
1	TEMPS	Eau mitigeage	Bouclage	Résultat Désinfection	Sonde	Température min	Température max	Alarmes
2	201610070000	-	-	-	-	-	-	-
3	201610070100	-	-	-	-	-	-	-
4	201610070200	-	-	-	-	-	-	-
5	201610070300	-	-	-	-	-	-	-
6	201610070400	-	-	-	-	-	-	-
7	201610070500	-	-	-	-	-	-	-
8	201610070600	-	-	-	-	-	-	-
9	201610070700	-	-	-	-	-	-	-
10	201610070800	-	-	-	-	-	-	-
11	201610070900	-	-	-	-	-	-	-
12	201610071000	-	-	-	-	-	-	-
13	201610071100	-	-	-	-	-	-	-
14	201610071200	-	-	-	-	-	-	-
15	201610071300	-	-	-	-	-	-	-
16	201610071400	-	-	-	-	-	-	-
17	201610071500	-	-	-	-	-	-	-
18	201610071600	23,3	23,8	-	-	-	-	-
19	201610071700	23,3	23,8	-	-	-	-	-
20	201610071800	23,3	23,8	-	-	-	-	-
21	201610071900	23,3	23,3	-	-	-	-	-
22	201610072000	23,3	23,8	-	-	-	-	-
23	201610072100	23,3	23,8	-	-	-	-	-
24	201610072103	23,3	23,8	-	-	-	-	-
25	201610072105	23,3	23,3	-	-	-	-	-
26	201610072105	22,7	23,3	-	-	-	-	-
27	201610072107	23,3	23,8	-	-	-	-	-
28	201610072109	23,3	23,8	-	-	-	-	-
29	201610072111	23,3	23,3	-	-	-	-	-
30	201610072113	23,3	23,8	-	-	-	-	-
31	201610072115	23,3	23,3	-	-	-	-	-
32	201610072117	23,3	23,8	-	-	-	-	-
33	201610072119	23,3	23,8	-	-	-	-	-
34	201610072121	23,3	23,3	-	-	-	-	-
35	201610072123	23,3	23,8	-	-	-	-	-
36	201610072125	23,3	23,8	-	-	-	-	-
37	201610072127	23,3	23,3	-	-	-	-	-
38	201610072129	23,3	23,8	-	-	-	-	-
39	201610072131	23,3	23,3	-	-	-	-	-
40	201610072133	23,3	23,8	-	-	-	-	-

Format de colonne nombre

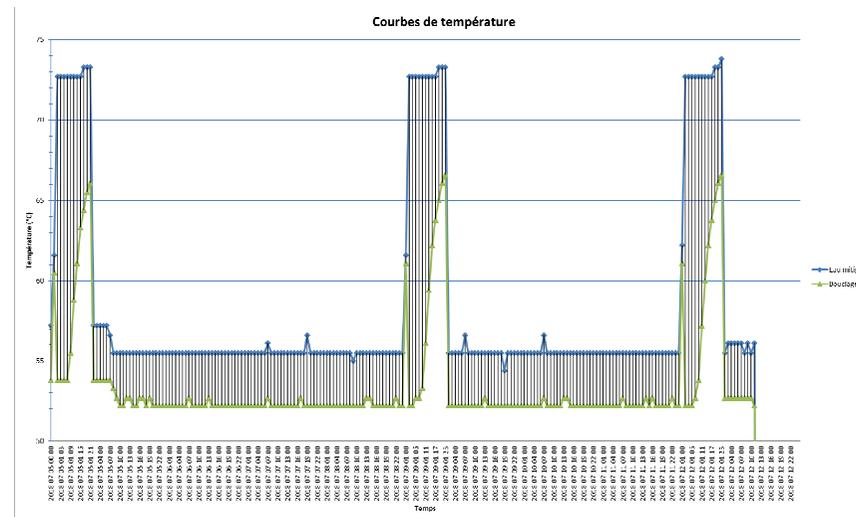


Mise à jour des courbes de température

Processing of file ULTRAMIX.CSV



- ULTRAMIX.CSV file is est automatically and daily updated at midnight. It could nevertheless be updated manually using the Export SD function to extract the day's data.


Open the .csv file under excel

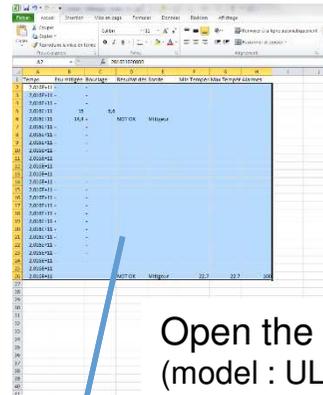


Select and copy the data area

Open the .xlsx model including temperature curve process (model : ULTRAMIX CSV.xlsx)

Past the the data area from the .csv file

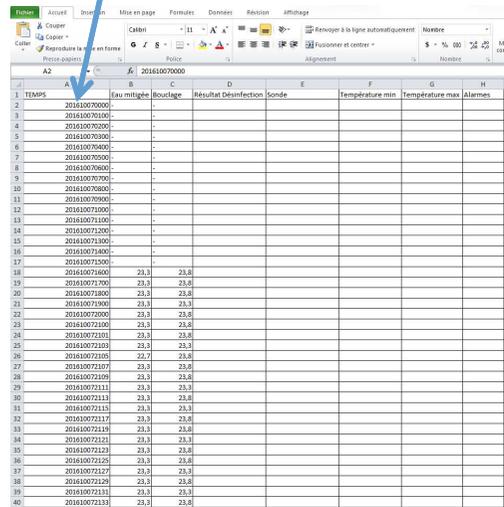

Column format number

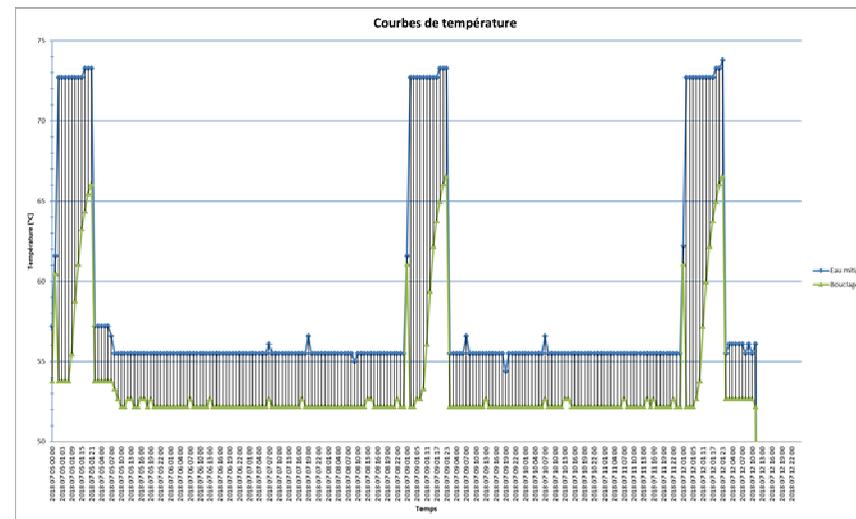

Update of the temperature curve