

Series HKF25

Pump mixing groups with thermostatic fix-point control for heating systems

EN **Installation and operating manual**
(translated from the original operating manual)



Contents

1	General Information	2
1.1	Important information about the installation and operating manual.....	2
1.2	Notes on supplier documents.....	2
1.3	Product conformity	2
1.4	Product features.....	2
1.5	Product Labeling	2
2	Safety.....	3
2.1	Safety notices.....	3
2.2	Important safety instructions.....	3
2.3	Intended use	3
2.4	Foreseeable misuse.....	3
2.5	Responsibilities of the operator.....	3
2.6	Groups of persons.....	3
3	Technical specification.....	4
4	Pressure loss diagram	5
5	Dimensions	5
6	Component overview.....	6
7	Installation and commissioning	6
7.1	General safety information	6
7.2	Installation diagram.....	7
7.3	Installation	7
7.4	Starting the unit	7
7.5	Setting the supply temperature.....	7
7.6	Thermometer settings.....	7
7.7	Switching the supply and return lines.....	8
8	Maintenance.....	9
8.1	General safety information	9
8.2	Annual maintenance schedule	9
8.3	Replacing wear parts.....	9
8.4	Removing the circulation pump	9
8.5	Installing the circulation pump.....	9
8.6	Removing the thermostatic mixing valve	10
8.7	Installing the thermostatic mixing valve	10
9	Disposal	10
9.1	Notification of administrative bodies and the manufacturer	10
9.2	Return to the manufacturer.....	10
10	Warranty.....	10

1 General Information

1.1 Important information about the installation and operating manual

NOTICE

The plant operator is responsible for ensuring compliance with the local laws and regulations (e.g. accident prevention regulations, etc.).

Incorrect operation or operating the product (Pump group HKF25) outside the specifications invalidates all warranty claims.

This Installation and Operating Manual

- is the component of the product (HKF25);
- contains instructions and information on safe and correct installation and commissioning of the product (HKF25);
- must be available to all users throughout the entire service life of the product (HKF25);
- is intended for trained personnel who are familiar with the applicable standards and provisions and, in particular, with the relevant safety concepts and the operation and maintenance of the product (HKF25);
- is protected by copyright and may not be changed without the manufacturer's permission.

1.2 Notes on supplier documents

The supplier documents contain specific information on the components, their technical features, installation instructions and other relevant details. Read these documents carefully and retain with this manual. The supplier documents cover the following:

- Circulation pump operating instructions
- Operating instructions for the thermostatic mixing valve.

1.3 Product conformity

For the product (Pump group HKF25), conformity according to Machinery Directive 2006/42/EC is declared.

1.4 Product features

- Patented 3-part EPP insulation shell.
- All system connections threaded with flat gasket.
- Stable wall mount incl. mounting hardware.
- Compact, space-saving design.

1.5 Product Labeling

The data plate is located on the inside of the insulation front shell.

2 Safety

2.1 Safety notices

DANGER

DANGER indicates an imminent danger that may cause serious physical injury or death if the appropriate safety precautions are not in place.

WARNING

WARNING indicates a danger arising through incorrect behaviour (e.g. misuse, disregarding notices, etc.) that may cause serious physical injury or death.

CAUTION

CAUTION indicates a potentially dangerous situation that may cause minor or slight injuries if the appropriate safety precautions are not in place.

NOTICE

NOTICE indicates a situation that may cause material damage if the corresponding precautions are not taken.

2.2 Important safety instructions

- Before using, carefully read through this operating manual.
- Only trained specialist personnel are permitted to perform maintenance, cleaning and repair work.
- The product (HKF25) must not be used if it is damaged or is no longer operating correctly. In this case, contact your specialist dealer immediately.
- Adhere to the maintenance instructions and intervals.
- Protect the product (HKF25) from the influences of weather.
- Never use the product (HKF25) outdoor.
- The product (HKF25) is only permitted to be used for the purpose for which it was intended.

2.3 Intended use

Pump groups (HKF25) for distributing heating water in heating systems.

The product (Pump group HKF25) is not intended to be operated by people (including children) with physical, sensory or mental disabilities, nor by people with insufficient experience or previous knowledge.

2.4 Foreseeable misuse

The following is considered to be foreseeable misuse:

- Operating the product (HKF25) contrary to the specifications.
- Improper use of the product (HKF25).
- Modifications to the product (HKF25) that were not agreed with the manufacturer.
- Using replacement or wear parts not approved by the manufacturer.
- Operating the product (HKF25) outdoors (parts and components are not UV resistant).

2.5 Responsibilities of the operator

The operator must ensure that:

- The product (HKF25) is only used for its intended purpose.
- The product (HKF25) is installed, operated and maintained according to the specifications in the Installation and Operating Manual.
- The product (HKF25) is only operated according to local regulations and occupational health and safety regulations.
- All precautionary measures have been carried out to avoid dangers originating from the product (HKF25).
- All precautionary measures for first aid treatment and firefighting have been carried out.
- Only authorized and trained users have access to the product (HKF25) and operate it.
- Users have access to this Installation and Operating Manual at all times.

2.6 Groups of persons

Only qualified persons may operate the product (Pump group HKF25) or perform service and maintenance work.

User

A user is deemed to be qualified if they have read these operating instructions and understood the potential risks associated with incorrect behavior.

Fitter/commissioner

Due to their specialist training and knowledge, and taking into consideration the applicable standards, provisions, regulations and laws, a fitter/commissioner is capable of performing work on the product (HKF25) and recognizing and avoiding potential risks.


System planner

The system planner is responsible for evaluating these parameters and developing workarounds.


3 Technical specification

Hydraulic data	
Max. operating pressure	6 bar
Ambient temperature	-2 to +40 ° (see pump specifications)
Operating temperature	+2 to +90 ° (see pump specifications)
Gravity brake opening pressure	10 mbar
Kvs mixing valve	4.5 m³/h
Temperature display range	0 - 120 °C
Temperature setting range	20-43 °C / 20-55 °C / 30-70 °C (depending on mixing valve design)
Nominal width	DN 25
Media	Water or water with glycol as per VDI (Association of German Engineers) 2035 / ÖNORM (Austrian standard) 5195
Electrical connection	
Power supply	See separate pump documentation
Dimensions	
Width x height x depth with EPP shell	300 x 370 x 240 mm
Centre distance	125 mm
Sealing surfaces distance	342.5 mm
Weight	
Weight without packaging	4.8 kg without pump; 6.7 - 6.8 kg with pump, depending on pump model.
Weight with packaging	approx. 0.6 kg more than without packaging
Connections to pipe network	
Heating circuit side connections	G 1½ male thread, with flat seals without screw fitting. G 1 female thread with screw fitting
Boiler side connections	G 1½ male thread, with flat seals
Tightening torques for screw fittings	
G ¾	35 Nm
G 1	55 Nm
G 1¼	90 Nm
G 1½	130 Nm
Materials	
Fittings	Brass CW617N
Pipes	Steel, galvanised Ø48 mm
Bypass pipe	Brass CW617N
Gravity brake	POM, NBR, stainless steel
Wall brackets	Galvanised sheet steel
Insulation shell	EPP (expanded polypropylene)
O-rings	EPDM
Plastics	impact-resistant and temperature-resistant
Flat seals	AFM 34/2
Other	
Circulation pump	See separate pump documentation


4 Pressure loss diagram

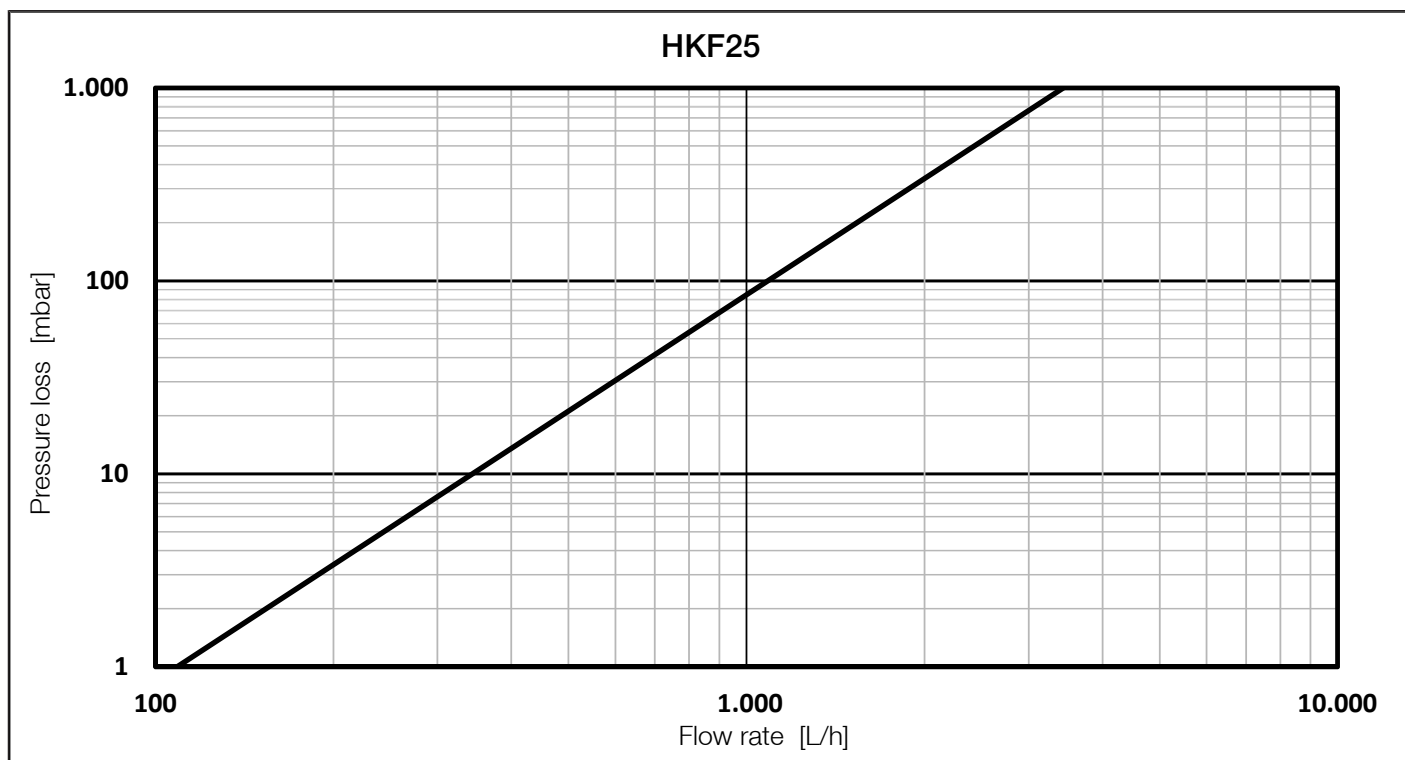

5 Dimensions

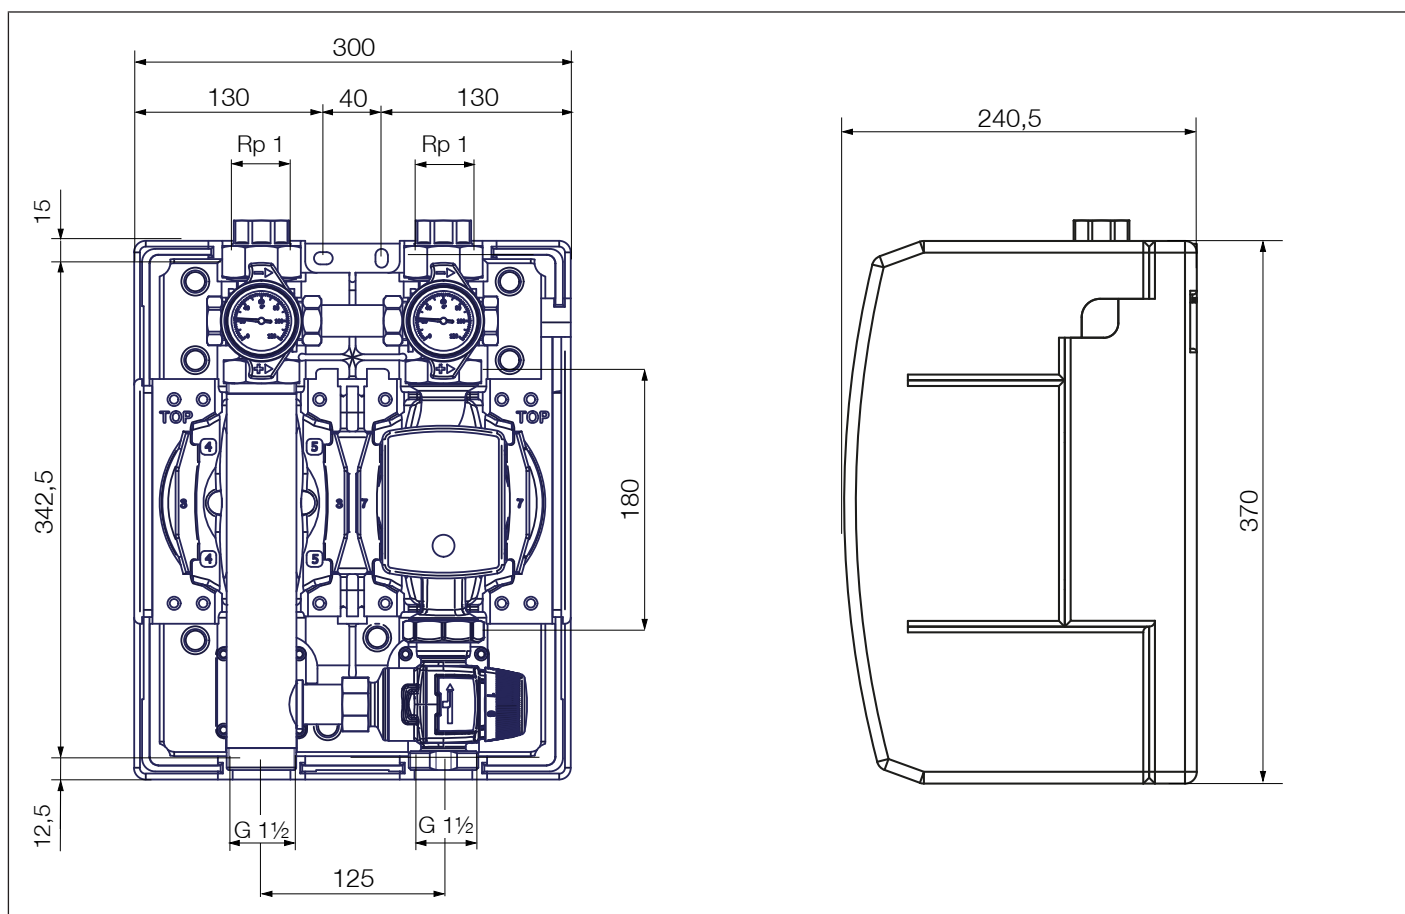

6 Component overview

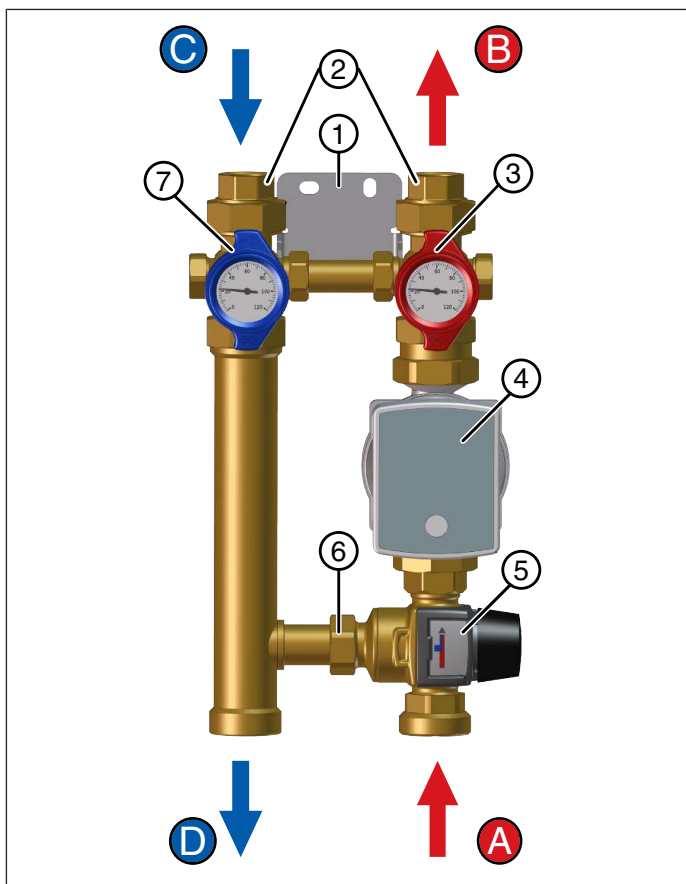

- | | |
|---|-------------------------------|
| A | Boiler circuit supply inlet |
| B | Heating circuit supply outlet |
| C | Heating circuit return inlet |
| D | Boiler circuit return outlet |

- | | |
|---|---|
| 1 | Wall bracket |
| 2 | Screw fittings G 1½ union nut x G 1 female thread |
| 3 | Ball valve with gravity brake (supply) |
| 4 | Circulation pump |
| 5 | Thermostatic mixing valve |
| 6 | Bypass pipe |
| 7 | Ball valve (return) |

7 Installation and commissioning

7.1 General safety information

DANGER

Electrical energy!

Risk of death from electric shock.

- Work on parts carrying live voltage must only be carried out by trained electricians.
- Disconnect the power supply of the system and secure it against being switched back on before carrying out any installation, maintenance, cleaning or repair work.

NOTICE

Material damage!

Opening shut-off valves quickly produces pressure surges.

- Always open shut-off valves slowly and in a controlled manner.


NOTICE

Material damage!

Incorrect repair and replacement of individual components.

- When carrying out repairs and replacing parts, note the prescribed mounting positions and flow directions for the individual components which are being replaced.

7.2 Installation diagram

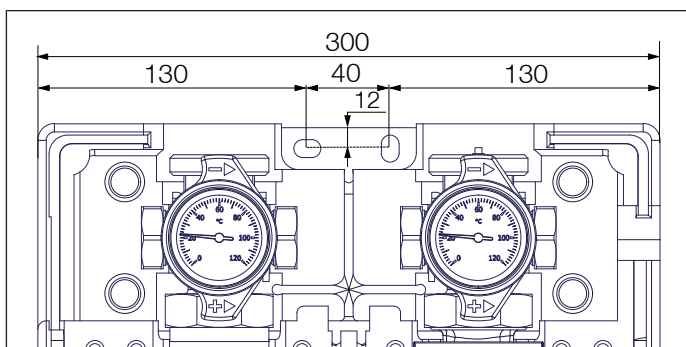


7.3 Installation

Before installing the unit and starting it for the first time, check all screw fittings and retighten if necessary!

Tightening torques for screw fittings

G ¾: 35 Nm; G 1: 55 Nm; G 1¼: 90 Nm; G 1½: 130 Nm.

1. Remove the pump group front shell.

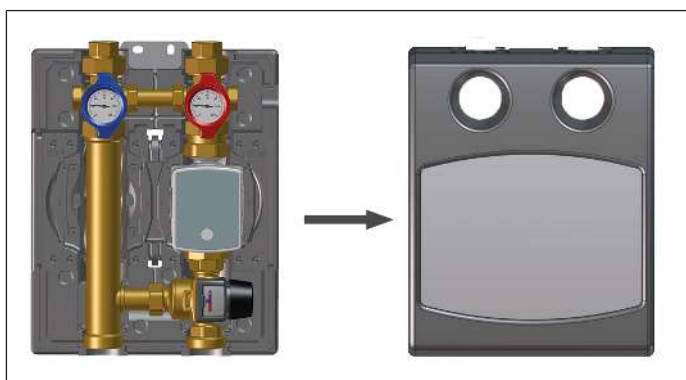


2. Mark the drilling points for mounting the pump group.
3. Drill holes for the relevant size screws and wall plugs.
4. Insert wall plug.
5. Insert the screws into the wall plugs.
6. Locate the pump group vertically on the wall (see installation diagram).
7. Screw the screws into the wall plugs.
8. Remove the thermometer handles and the intermediate insulation.
9. Connect the supply and return lines and check all screw connections are tight.

7.4 Starting the unit

- ✓ The pump group is fully installed.
 - ✓ The fittings are preassembled at the factory; however, the tightness of the seal is to be checked before commissioning (pressure test).
 - ✓ The pump group must be disconnected from the power supply and secured.
 1. Vent the heating system.
 2. Connect the power supply
- ⇒ The pump group automatically switches itself on when the power supply is connected.
3. Fit the intermediate insulation and thermometer handles.
 4. Fit the pump group front shell.


7.5 Setting the supply temperature

1. Set the required supply temperature while the pump group is operating using the handwheel on the thermostatic mixing valve.
2. Check the setpoint value using the supply thermometer.

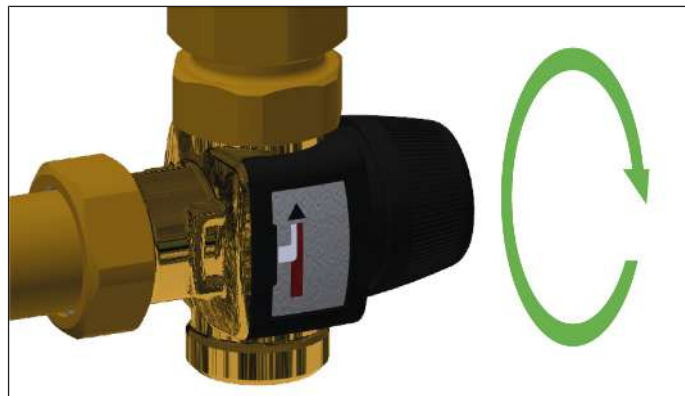

For further information on the thermostatic mixing valve please refer to the enclosed instructions.

7.6 Thermometer settings

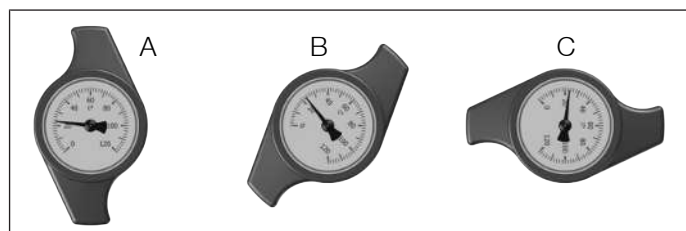



- | | |
|---|--|
| A | Operating position: gravity brake ready to work; ball valve open |
| B | Drain: gravity brake open; ball valve half open (only included in the supply line) |
| C | Service position: ball valve closed |

7.7 Switching the supply and return lines

✓ The supply is on the right-hand side

1. Disconnect the power supply and secure against reconnection.
2. Remove the upper screw fittings.
3. Loosen the nuts on the pump lower connection and remove the spacer.

4. Rotate the pump and the supply ball valve through 180 degrees.
5. Loosen the nut on the return ball valve and rotate the latter through 180 degrees.
6. Rotate the pump group through 180 degrees.
- ⇒ The supply is now on the left-hand side.
7. Tighten all screw fittings and other connectors.
8. Check the seals on the pump group are not leaking.

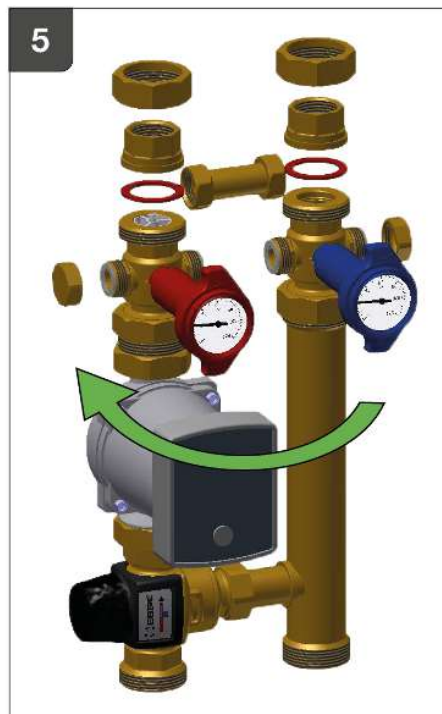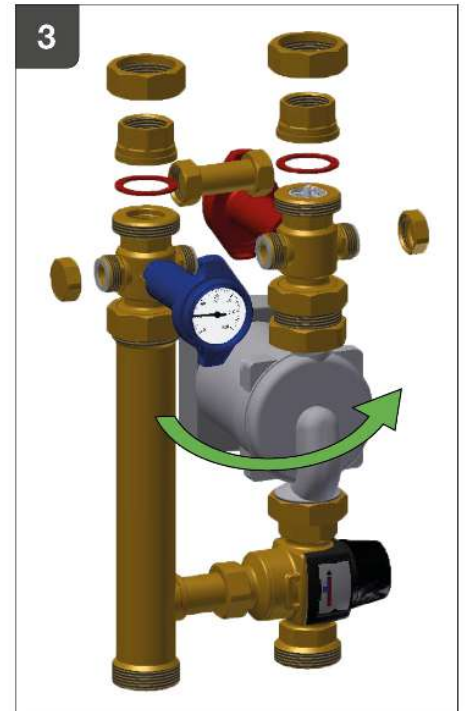

8 Maintenance

8.1 General safety information

DANGER

Electricity!

Risk of death from electric shock!

- Maintenance on the product (HKF25) may only be carried out once the power supply has been disconnected.

WARNING

Hot surfaces!

Risk of serious burns.

- Do not touch the pipes or components during operation.
- Ensure that the product (HKF25) has cooled down before carrying out maintenance, cleaning and repair work.
- Wear heat-resistant safety gloves if it is necessary to carry out work on hot components.

8.2 Annual maintenance schedule

General visual inspection

- Check the product for leaks and, where necessary, retighten connections with flat seals or replace the seals.

Functional check

- Check the correct adjustment and operating and performance parameters.
- Check with the user in the event of anomalies.

Ball valves

- Check for correct operation of shut-off valves and ball valves.

Pump

- Be aware of noise build-up in the pump.

Thermostatic mixing valve

- Check the functionality of the thermostatic mixing valve.

Post-maintenance checks

- Check all loosened screw connections for a firm seating and retighten if necessary.
- Remove all tools, materials and other equipment used from the work area.
- Fill and vent the system.

8.3 Replacing wear parts

Note that the product has parts which are subject to wear that naturally occurs as a result of normal use, even when properly maintained and serviced.

Specifically, these are mechanical parts and parts which are in contact with hot water and steam such as hoses, seals, valves, etc.

Normal wear and tear is not a defect and is not covered under warranty or guarantee. Nevertheless, defects and malfunctions may only ever be remedied by trained specialist personnel. Contact your specialist dealer for more information.

8.4 Removing the circulation pump

1. Disconnect the power supply and secure against reconnection.
2. Remove the pump group front shell.
3. Close the shut-off valves.
4. Remove the thermometer handles and the intermediate insulation.

5. Disconnect the circulation pump wiring.

WARNING


Hot water!

Severe scalding possible.

- Allow the product (HKF25) to cool before carrying out any maintenance, cleaning or work repair.
 - Do not put hands into hot water when draining the product (HKF25).
6. Undo the union nuts (X) and remove the circulation pump.

8.5 Installing the circulation pump

1. Replace the seals on the screw connections.
 2. Position the circulation pump and tighten the union nuts (X). Observe the tightening torques for screw fittings.
- #### Tightening torques for DN25 pump groups
- Pump G 1½, AFM 34/2 seals: 130 Nm.
 - Pump G 1½, EPDM seals: 30-40 Nm.
3. Connect the circulation pump wiring.
 4. Slowly open the ball valve by turning the thermometer handle.
 5. Slowly pressurise the pump group and bleed the system if necessary.
 6. Check the seals on the pump group are not leaking.
 7. Reconnect the power supply to the pump group.
 8. Remove the thermometer handles.
 9. Fit the intermediate insulation.
 10. Fit the thermometer handles.
 11. Fit the front shell.

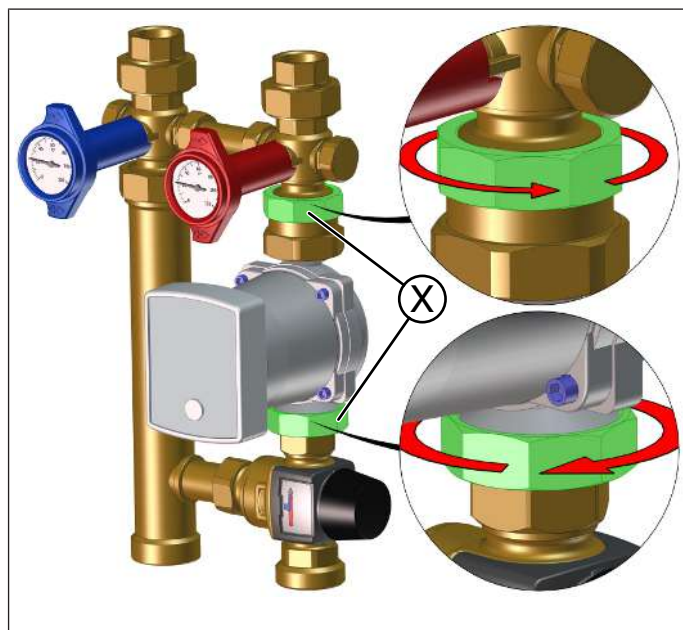

8.6 Removing the thermostatic mixing valve

1. Disconnect the power supply and secure against reconnection.
2. Remove the pump group front shell.
3. Close all ball valves by rotating the thermometer handle.
4. Remove the thermometer handles and the intermediate insulation.
5. Remove the mixing valve (A) by loosening the union nuts (X).


8.7 Installing the thermostatic mixing valve

1. Replace the seals on the screw connections.
2. Position the mixing valve (A) and tighten the union nuts (X).

Tightening torques for screw fittings

Tightening torques for DN25 pump groups

- Pump G 1½, AFM 34/2 seals: 130 Nm.
 - Pump G 1½, EPDM seals: 30-40 Nm.
 - Bypass G 1, AFM 34/2 seals: 55 Nm.
3. Slowly open the ball valve by turning the thermometer handle.
 4. Reconnect the power supply to the pump group.
 5. Remove the thermometer handles.
 6. Install the intermediate insulation, the thermometer handles and the front shell.

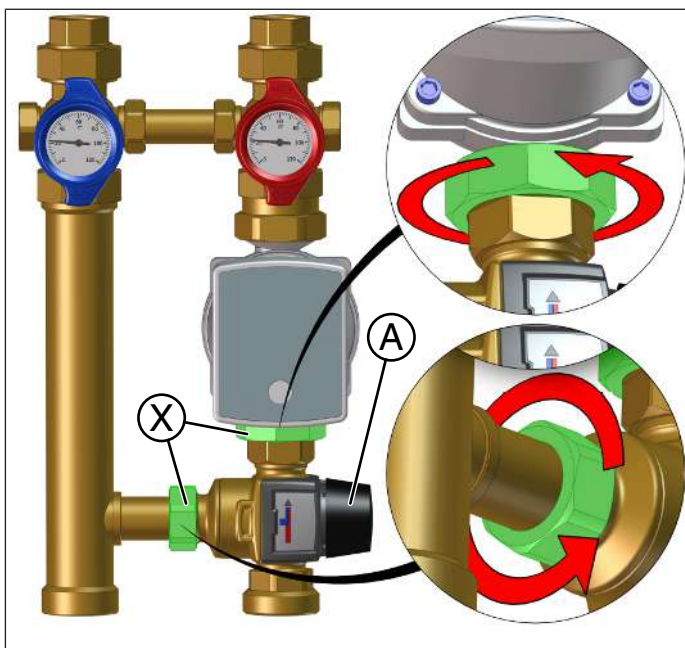

9 Disposal

WARNING

Potential for contamination of the environment and groundwater from improper disposal

- The legal regulations and guidelines in the country of operation must be observed when disposing of components and operating materials.
1. Disassemble the product (HKF25) properly or commission a specialist company to do so.
 2. Sort the assemblies and component parts into recyclable materials, hazardous substances and operating materials.
 3. Dispose of the assemblies and components in accordance with local laws and regulations or take them to be recycled.

9.1 Notification of administrative bodies and the manufacturer

Inform the manufacturer of decommissioning and disposal of the product (HKF25) for statistical purposes.

9.2 Return to the manufacturer

Get in contact with the manufacturer if you would like to return the product (Pump group HKF25) or parts of it.

10 Warranty

WATTS products are tested extensively. WATTS therefore guarantees only the replacement or, at the sole discretion of WATTS, the free-of-charge repair of components of the supplied products where these, in the opinion of WATTS, exhibit verifiable manufacturing faults. Warranty claims due to defects or defects of title may be asserted within one (1) year of delivery/transfer of risk. Excluded from the warranty are damages attributable to normal use of the product or friction and damages resulting from modifications or non-authorised repairs on the products, for which WATTS rejects all claims for compensation (direct or indirect). (For more detailed information, please refer to our website.) In all cases, supply is subject to the General Terms and Conditions, which can be found at www.watts.eu/en/gtc.

The descriptions and photographs contained in this product specification sheet are supplied by way of information only and are not binding. Watts Industries reserves the right to carry out any technical and design improvements to its products without prior notice.

Warranty: all sales and contracts for sale are expressly conditioned on the buyer's assent to Watts terms and conditions found on its website www.watts.eu/en/gtc. Watts hereby objects to any term, different from or additional to Watts terms, contained in any buyer communication in any form, unless agreed to in a writing signed by an officer of Watts.



Watts Industries Deutschland GmbH

Godramsteiner Hauptstr. 167 • 76829 Landau • Germany

Tel.: +49 6341 9656 0 • WIDE@wattswater.com

www.watts.eu/de

Watts contacts in Europe: www.watts.eu/en/company/contacts